

Install in 4 easy steps

STEP 1 Connect Faucet

A. Slide small rubber gasket, metal plate, and large rubber gasket onto faucet stem (in the above order)

B. Insert faucet stem into existing hole (1/2" - 1-3/8" diam.) in sink and fasten by sliding the large plastic washer and metal lock washer onto stem and tighten with nut



STEP 2 Install Valve

A. Close cold water supply valve. Unscrew supply line from cold water valve

B. Screw angle stop valve onto cold water valve

C. Screw supply line to angle stop valve



STEP 3 Mount System

A. Screw brackets onto housings using the four shorter screws provided



B. Mount brackets on cabinet wall. Allow at least two inches between bottom of housing and floor



STEP 4 Connect Tubing

A. Connect first tube: one side to filter input and the other side to angle stop valve. Connect by pushing tube into fitting

B. Connect second tube: one side to filter output by pushing tube into fitting.

B. Connect other side to faucet stem: slide compression nut and plastic ring onto tube, then insert the insert to end of tube. Push tube into faucet stem and screw compression nut and tighten. Do not over-tighten.

Open valve. Adjust valve to allow a maximum flow of 0.5 gallons/min. Let filter run for 5 minutes before use. Cloudiness/air bubbles may be present for a few days

For replacement cartridges use model RK210